



Standard T-Leg


1. Remove the T-leg from its case and wrapping. Position it as shown (pic 7).

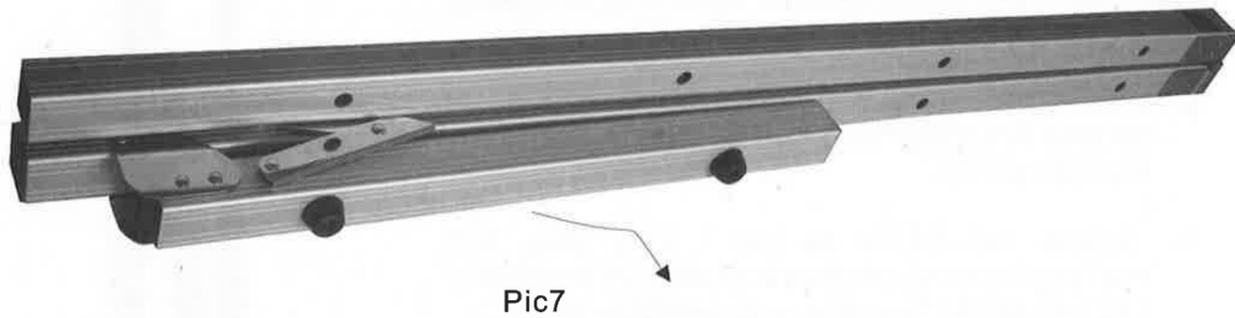

2. Unfold the T-leg following the directions as pic 7, lock down all four corner braces (as pic 8).

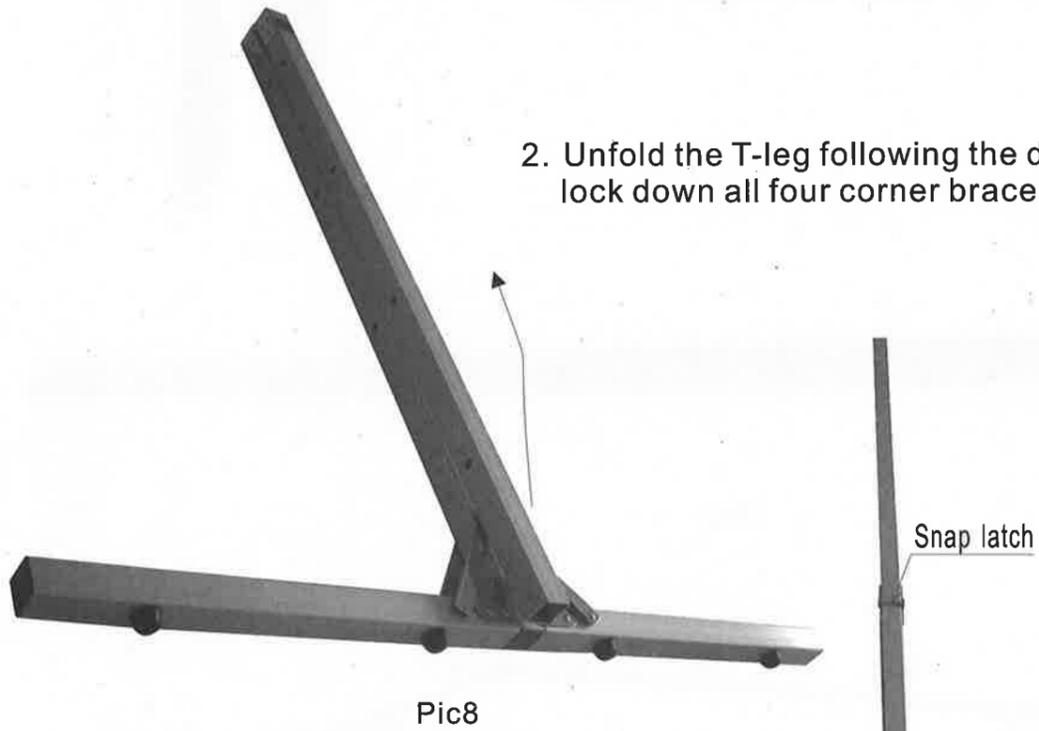


3. Unfold the T-leg following the directions as pic 8, snap latches will automatically lock (as pic 9).

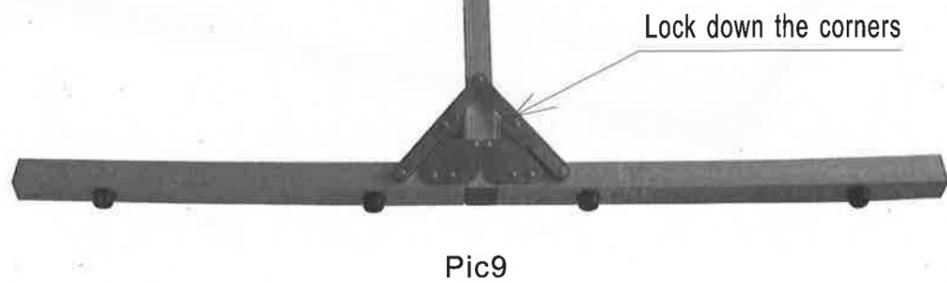


AT-Leg (For added stability on size 150" and over)

1. Remove the AT-leg from its case and wrapping. Position it as shown (pic 10).

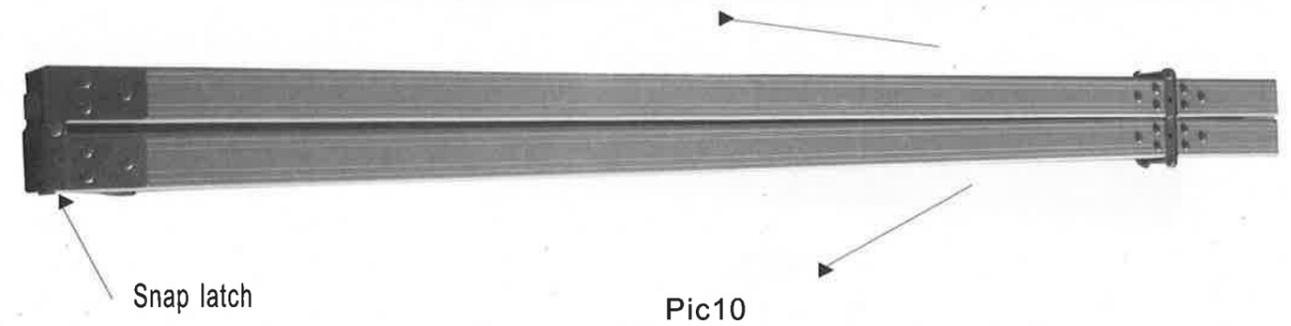

2. Unfold the T-leg following the directions as pic 10, snap latches will automatically lock (as pic 11).

3. Attach AT-leg to T-leg using 4 speedy cranks per leg (as pic 12).

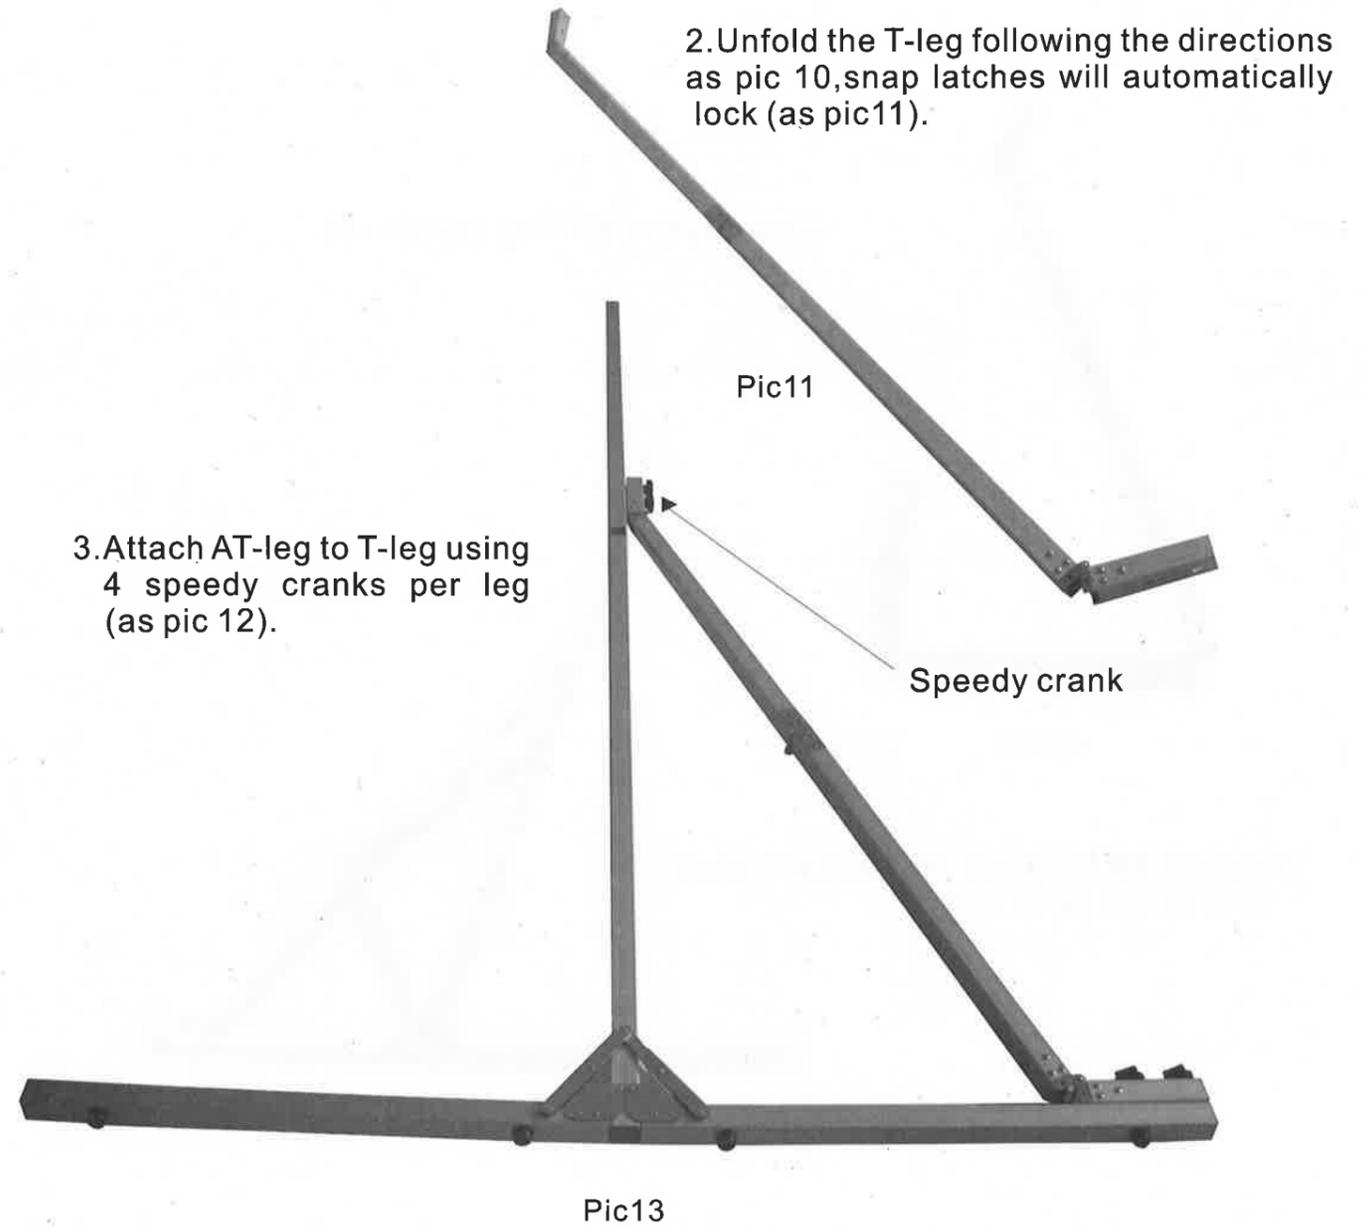


SAT-Leg (For added stability on size 180" and over)

1. Remove the SAT-leg from its case and wrapping(as pic13).




Pic13

2. Unfold the SAT-leg (as pic 14).

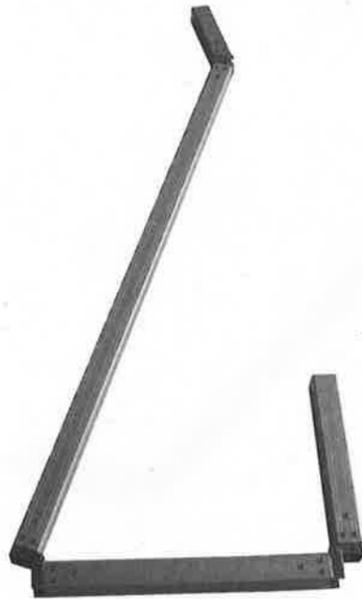

Pic14

3. Attach SAT-leg to T-leg using 4 speedy cranks per leg(as pic 15).

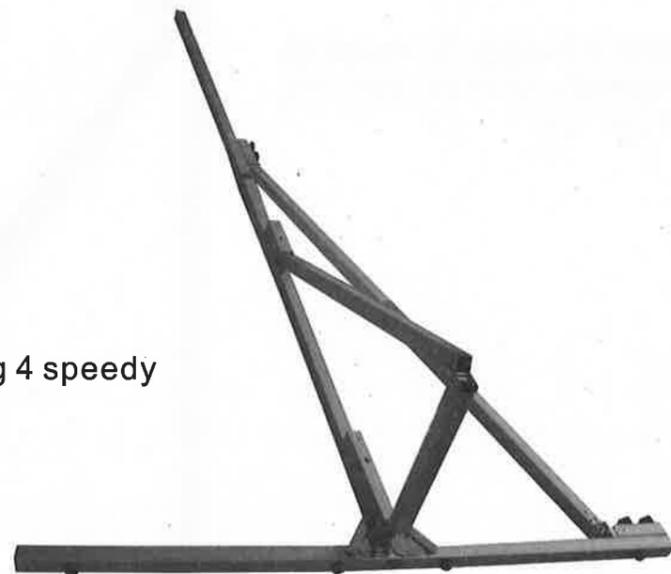


Pic15

Three Section Frame

1. Remove the frame from its case and wrapping. Position it as shown(pic4).

2. Unfold the frame following the directions as pic4 so that it is lying flat, snap latches will automatically lock(as pic 5).


3. Unfold the frame as pic 2 and lying flat, makes the snap latched locked automatically. Lock down all four corner braces(as pic 6).

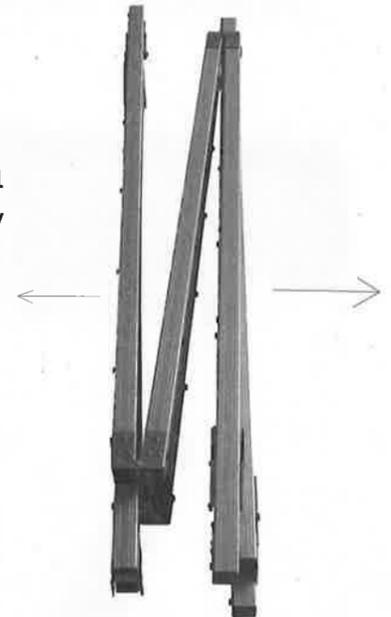

Pic4



Pic5

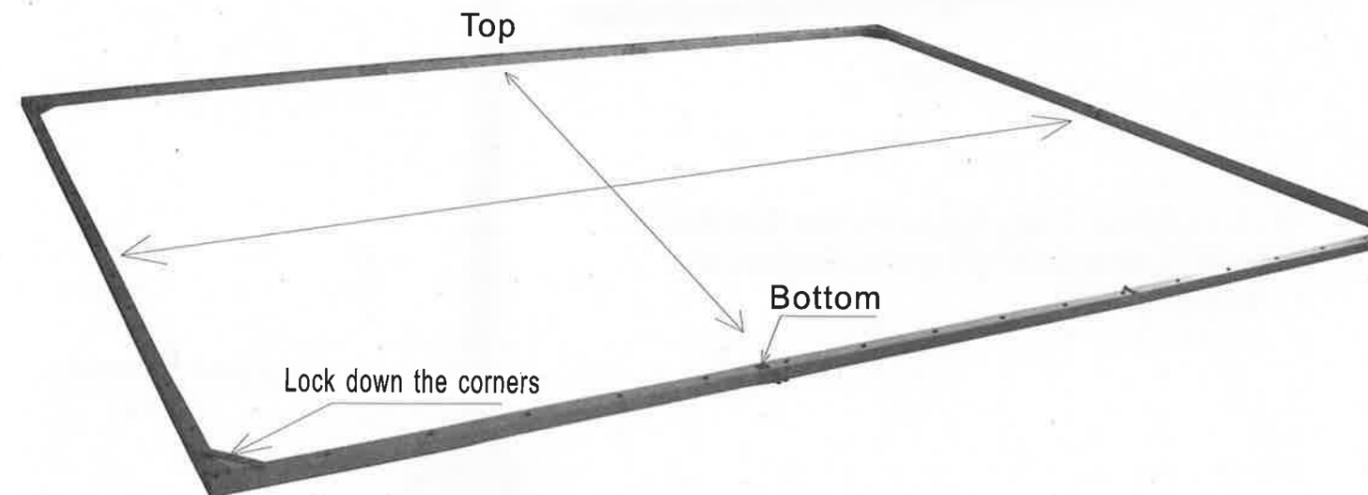

Pic5

Procedure


Frames and legs are made of 36*36mm hard aluminum tubing with an anodized finish and electrophoresis. With proper care they will provide many years of use. Please follow the set up instructions below.



pic1


Two Section Frame

1. Remove the frame from its case and wrapping. Position it as shown (pic1).
2. Unfold the frame following the directions as pic1 so that it is lying flat, snap latches will automatically lock (as pic 2).

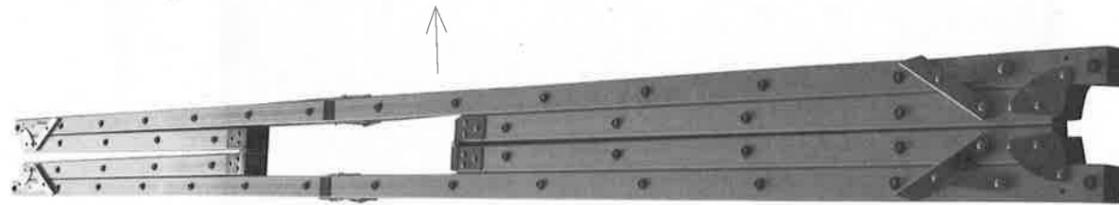

Pic2


3. Unfold the frame as pic 2 and lying flat., makes the snap latched locked automatically. Lock down all four corner braces (as pic 3).

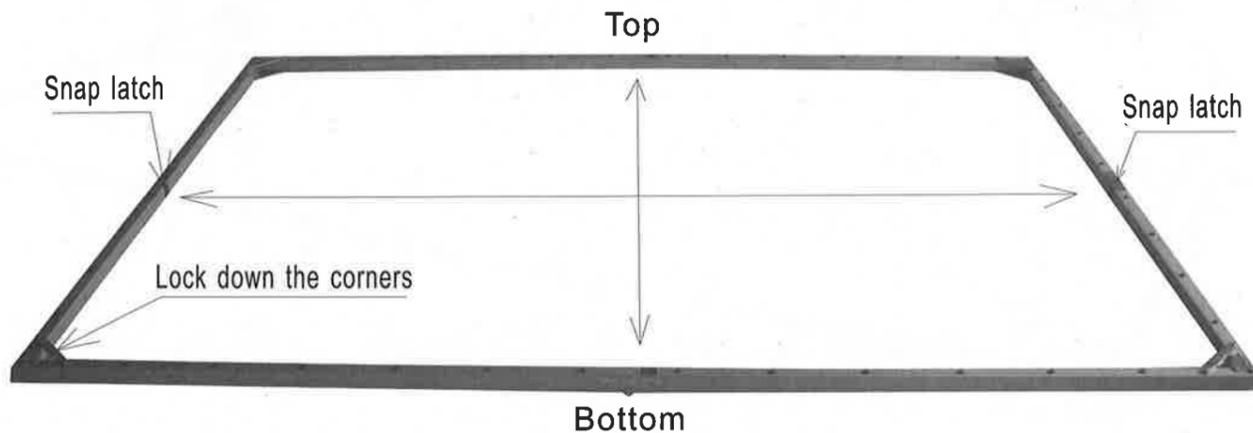


Pic3

Stability of frame and leg

1. Attach leg to each side of frame using at least 4 speedy cranks per leg as below.

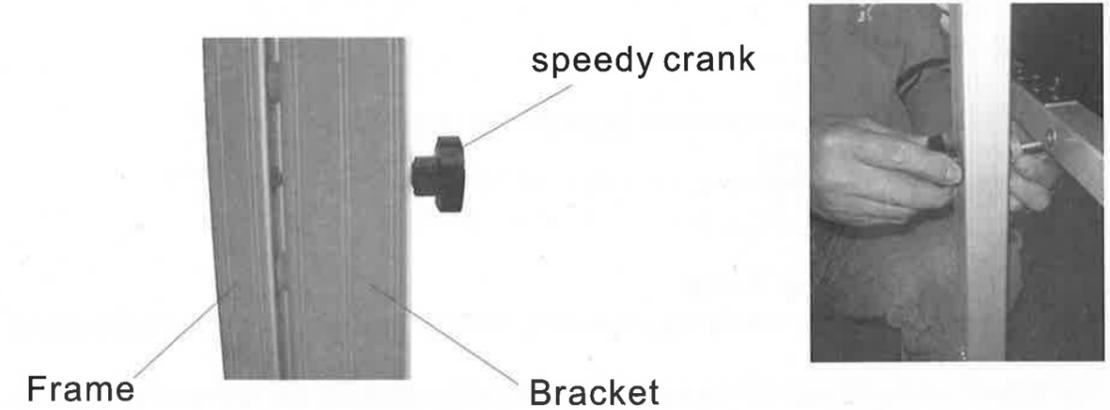


2. Height adjustment: Height is adjustable in 15cm either up or down, Normal screen height is 112.5cm from the frame to the floor.
3. To fold the frame, unlock four corners braces. Push the snap latch buttons and fold the frame (as below).

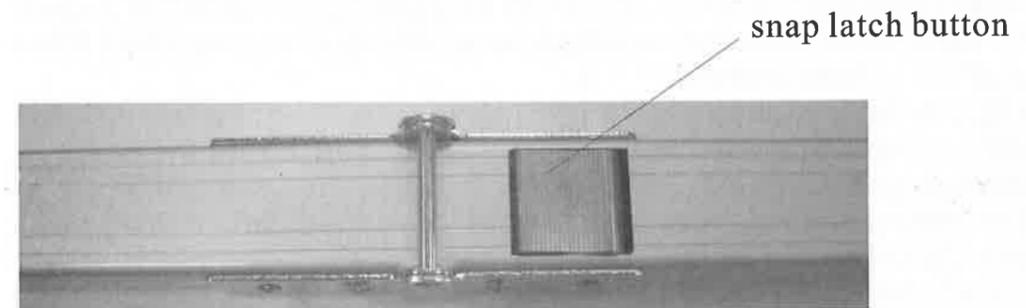

Unfolding Fabric

1. Put the buttons in four corners of the fabric to the corners of the frame. (The tension of the fabric would support the connection of the fabric to the frame) (as below).

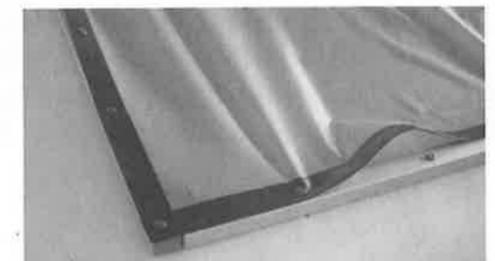

Note: When unfold the fabric, keep away from anything with sharp-angled Or rigid. Please put clean cloth or paper under the fabric to avoid dirty.

Packing List

1. Frame 1 pcs
2. T-leg 2 pcs
3. AT-leg 2 pcs (option)
4. SAT-leg 2 pcs (option)
5. Fabric 1-2 pcs (front projection fabric, rear projection fabric)
6. Speedy crank 6-32 pcs
7. Installation guide 1 pcs

Folding fabric for packing

When folding fabric for packing, observe the following precautions before proceeding:

1. The fabric should not be allowed to contact painted, varnished or plastic finished objects for a prolonged period of time.
2. Make sure the fabric is on a clean, flat surface.

Then proceed in the following manner:

Place clean white tissue paper or white cloth with no printing on top of the picture surface. Under no conditions should newspaper or anything similar be used since these may damage the screen material.


1. With the viewing side facing up, fold the fabric in half from top to bottom. Make sure when folding, the surface does not come in contact with either the black binding, grommets or snap buttons.
2. If the material on the first fold is more than 1 meter high, then fold once again, but always place clean tissue paper between the folds.
3. For large size fabric, fold in half again if necessary. Make sure when folding, the surface does not come in contact with either the black binding, grommets or snap buttons.
4. After the top to bottom folding procedure is completed, then fold from left to right and continue folding until the fabric is of sufficient size to fit into the leatherette case.

Cleaning

Surface can be cleaned as follows:

Using a white clean cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circular motion. Using a dry 100% cotton cloth, wipe dry after each cleaning session. To clean a stubborn stain or a sticky surface, use denatured alcohol (methanol or methyl alcohol) following the same procedure as for water.

Fast Fold Screen Installation Guide

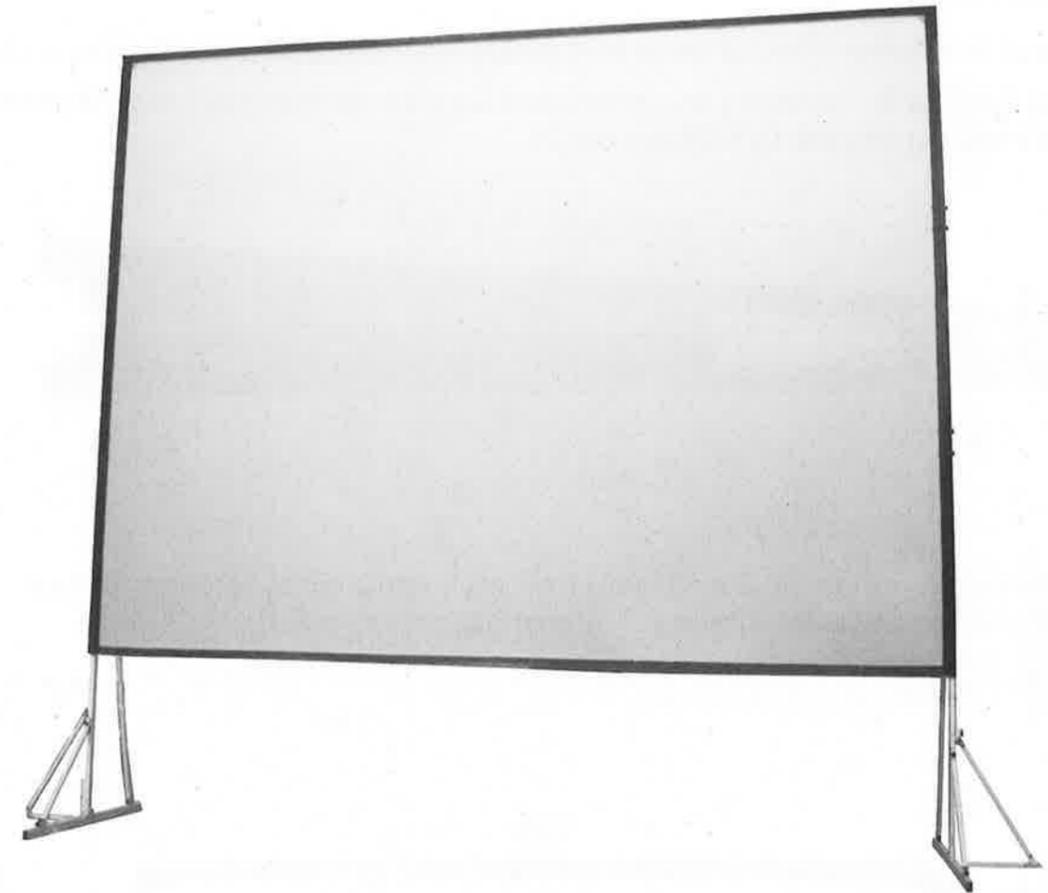

Please always follow the instruction on the installation guide in assembling and usage.